

MANUAL

CALIBRE 50 MEDIDA

18	50	1200
18	50	1300
18	50	1400
18	50	1500
18	50	1750

PESO

1.95
2.12
2.29
2.44
2.86

PESO CON CORE

2.25
2.42
2.59
2.74
3.16

MANUAL

CALIBRE 60 MEDIDA

18	60	1200
18	60	1300
18	60	1500
18	60	1200
18	60	1300
18	60	1500

PESO

2.35
2.54
2.93
2.61
2.83
3.27

PESO CON CORE

2.65
2.84
3.23
3.01
3.23
3.67

MANUAL

CALIBRE 70 MEDIDA

12 70 1300

12 70 1500

15 70 1300

15 70 1500

18 70 1200

18 70 1300

18 70 1500

20 70 1300

20 70 1500

PESO

1.98

2.29

2.48

2.86

2.74

2.97

3.42

3.30

3.81

PESO CON CORE

2.38

2.69

2.88

3.26

3.14

3.37

3.82

3.80

4.31

MANUAL

CALIBRE 80 MEDIDA			PESO	PESO CON CORE
3	80	1300	0.65	0.75
4	80	1500	0.87	0.97
5	80	1500	1.09	1.19
12	80	1300	2.26	2.66
12	80	1500	2.61	3.01
15	80	1300	2.83	3.23
15	80	1500	3.27	3.67
18	80	1250	3.27	3.67
18	80	1300	3.4	3.8
18	80	1400	3.65	4.05
18	80	1450	3.79	4.19
18	80	1500	3.92	4.32
20	80	1000	2.90	3.4
20	80	1300	3.77	4.27
20	80	1400	4.06	4.56
20	80	1500	4.36	4.86
30	80	1500	6.53	7.13